



accessrec[®]

A 100% AMERICAN-OWNED COMPANY.

**ACCESS TO
RECREATION
FOR ALL!**

WWW.ACCESSREC.COM

OUR PHILOSOPHY

AccessRec LLC prides its business on affordability, quality and efficiency. Although we strive to make our products the most affordable on the market, allowing more beach and park & recreation communities to expand their accessibility, we also maintain our expectation that these products be the best on the market. To ensure high quality standards, AccessRec LLC focuses on the performance of our products at every stage -from design, to manufacturing and the ultimate end use. Key focus areas included durability, stability and maneuverability. While our products provide all these things, the highlight is their simplicity. We know that simplicity is particularly important for staff. Easy installation and removal allow our mats to be where they are needed the most. Quick and easy removal also allow for storage off season or in inclement weather, preserving the product as well as your investment.

“PEOPLE OF ALL ABILITIES CAN NOW ENJOY THE OUTDOORS”

OUR PRODUCTS


accessmat®
Pg: 6


accessdeck®

accessdeck® usa
Pg: 10


water
wheels®
Pg: 14


terrawheels®
Pg: 16


wetmat®
Pg: 18


grassmat®
Pg: 20

ACCESSREC® ALSO OFFERS
PVC CHAIRS • HIPPOCAMPE
MR. BOARDWALK • MUSTMOVE®
Pg: 22



BEACH & PARK ACCESS FOR ALL!

Some of most beautiful views and most wonderful memories are beachside. Sun on your back, salt water on your lips and sand between toes, a day like this should be enjoyed by everyone. Our range of products does just that! AccessDeck™, AccessDeck®USA and AccessMat®, ADA compliant beach accessibility surfaces, take people of all abilities closer to the water without the stress of battling through sand, while TerraWheels®, our all-terrain wheelchair, enables them to enjoy the sand and other type of uneven terrains, and, WaterWheels®, our floating beach wheelchair, let them enjoy the surf. While we believe that our range of matting systems and wheelchairs make any outdoor recreational areas more accessible to all, we invite you to contact us if you have any application not discussed under our brochure or website. We hope that you find our catalog educational and entertaining!



NON WOVEN POLYESTER ROLL OUT MAT

Hotels & Resorts, Counties, Cities, Towns, National & State Parks, other government and non-profit organizations officials, as well as any individual willing to increase accessibility to their beaches should consider providing our ABA / ADA beach compliant AccessMat® system to comply with the Architectural Barriers Act and the Americans with Disabilities Act (ADA) guidelines.



AccessMat® Beach Accessibility Mats have been specifically developed for use in permanent or temporary recreation access applications. AccessMat® is a portable and removable rollout access route that can be used in a multitude of applications for individuals of all abilities (pedestrians and wheelchairs access), as well as strollers, and more particularly in beach environments.

AESTHETICALLY PLEASING

Visually attractive, the blue color of the AccessMat® provides a surface that is highly visible, delineating the route to access recreation areas for people with visual impairments, while the brown color perfectly blends into the landscape. AccessMat® can be offered in 3', 5', 6' or 10' width by 25', 33', 50', and 100' length and is available in blue or brown color.

AFFORDABLE

Designed & produced in the United States, AccessRec LLC provides the most affordable way to create a beach access route. Especially when compared to the costs required in frequent replacement and extensive installation, maintenance or repair of our competitors, AccessMat® is the most economical solution on the market.

COMFORTABLE AND SAFE

Developed specifically for pedestrian traffic, AccessMat® provides the friendliest surface for barefoot beach goers. Wherever a water pervious, enhanced grip walkway access is required AccessMat® Beach Accessibility Mat® is the solution. AccessMat® polyester material provides the safest edges that do not require secondary finishing.

This highly reduces the risk of injury to bare feet or cutting your hands when installing or removing AccessMat®. Our AccessMat®'s cool surface lends to the barefoot users' comfort, especially on those hot, sunny days!



QUICK INSTALLATION & MAINTENANCE

Two people can install a 5' x 100' section in less than 10 minutes.

Minimal maintenance - it can be cleaned by use of a broom, blower, or pressure washer—sand goes through the permeable structure of the mat and does not get stuck under the surface of the mat.

ENVIRONMENTALLY FRIENDLY & RECYCLABLE

This environmentally friendly product is easily installed and removed per environmental regulations. The UV stabilized polyester material is recycled and recyclable after use reducing its environmental impact.

DURABLE & LIGHTWEIGHT

AccessMat® will not fray on its edges nor show any kind of wear & tear on the surface during normal use and proper maintenance.

The durability of construction and portability of the product make it the perfect solution for providing accessible beach pathways. Utilizing the benefits of polyester ensures that rigidity and strength are preserved over soft sand surfaces, while the non-woven polyester material is able to contour to undulating surfaces. Weighing only 0.45lbs/sqft AccessMat® can easily be carried by 1-2 people. At the end of the season simply roll back your AccessMat® and store it until the next beach season.

Unlike some of our competitors' products, your mat will remain as lightweight as the first time you put it down, as sand does not get stuck under the flat polyester surface. AccessMat® comes with a 5 yrs. limited warranty



accessmat®

ADA/ABA COMPLIANT BEACH ACCESS SURFACES

Product	Kit P/N	Material	Color	Weight (lbs/sqft)	Dimensions		Roll Weight (Lbs)	Diameter In.	
					Width (ft)	Length (ft)			
ACCESSMAT®	AM3-25	100% Recycled NON WOVEN Polyester Fabric/Roll	Blue or Brown	0.42	3	25	42	9	
	AM3-33					33	63	10	
	AM3-50					50	95	11	
	AM3-100					100	126	13	
	AM3-ANG								
	AM3-SQ								
	AM3-CUST				CUST.	—	—		
	AM5-25				0.455	5	25	57	9
	AM5-33						33	75	10
	AM5-50						50	114	11
	AM5-100			100			228	13	
	AM5-ANG								
	AM5-SQ								
	AM5-CUST			CUST.		—	—		
	AM6-25			6		25	68	9	
	AM6-33					33	90	10	
	AM6-50					50	137	11	
	AM6-100				100	273	13		
	AM6-ANG								
	AM6-SQ								
AM6-CUST	CUST.	—	—						
AM10-25	10	25	114		9				
AM10-33		33	150		10				
AM10-50		50	228		11				
AM10-ANG									
AM10-SQ									
AM10-CUST	CUST.	—	—						
ACCESSCOM ADD PANEL	AC3	Magic Fabric	Custom Logo & Text		3	2.25			
	AC5				5	2.25			
	AC6				6	2.25			
	AC10				10	2.25			

Our ready-to-install-on-site Kit includes the fabric, strap, alu. connector, grommet, plug, rivet & stake.

CONNECTOR & HARDWARE SYSTEM

durable aluminum connectors that will not detach under tension - simply insert our innovative plugs and stainless-steel bolts & nuts inside the connector's holes to connect two mats in a seamless manner. Connector & Hardware are 100% barrier free and ADA compliant.



PREMIUM PLASTIC PANELS

Our trademarked solution, ACCESSDECK® made abroad and ACCESSDECK®USA made in the USA, are multi-function super strong and non-slip panel systems designed for your leisure and construction needs. From pedestrians to heavy duty vehicles, these are multi-faceted. They are the perfect solution to protect your ground surface for events.



MANUFACTURED TO THE HIGHEST STANDARD

AD is constructed using a high-density polyethylene (HDPE) material recognized for its strength-to-density ratio. This material provides a firm support base and traction for a wide variety of recreational activities; in addition, its chemical and weather resistant capabilities, along with its UV protective additives, help preserve and protect AD from any damage or deterioration caused by outdoor elements.

THE IMPORTANCE OF VERSATILITY

One of the most exciting features of AD is its reversible capability. AD has a unique integrated tread pattern molded onto each side of the plate to serve a multi-purpose solution. This capability is ideal for situations where the need for wheelchair and pedestrian access is present; however, a rugged tread design may, at one point, be desired.

On one side AD offers a wheelchair and pedestrian friendly, non-slip tread design to guarantee a safe and comfortable access way while still providing a traction-resistant surface for vehicles and/or equipment.

The second design is our standard rigid surface that offers additional mat traction to the ground, helping to prevent mat slippage or spin out. This design is specific to larger vehicular traffic (i.e. machine equipment and A TVs).



VERSATILE

The dimensions of AD™ make it more manageable and transportable. The installation and removal process is both quick and easy and requires no more than 2 people to complete the job (no tools or machinery necessary!). AD™ consumes less space, it is easier to store and ship and, therefore, the overall cost is less.

VISUALLY APPEALING

AD™ is manufactured in blue and in tan with a lighter version of blue and tan for ADUSA. The blue color of the mat is perfect for standing out while the tan color blends in nicely with its natural surroundings. The blue and tan colored plates are not only aesthetically pleasing to the eye, but integrates well with our beach accessibility roll out matting systems, which we also offer in blue and in brown.




NEW MEASUREMENTS YIELD GREAT BENEFITS

It contains 4 connection holes (one at each corner) and 6 additional holes that allow the panels to be connected in a variety of configurations.


- The standard weight of one panel is 62–69lbs (28.1 to 31.3kg) respectively for ADUSA and AD.
- Each panel has a width and length of 4ft x 6ft.
- It measures 0.5in (12.7mm) in thickness.
- Handles up to 80 tons.
- Connect in a variety of configurations.
- 6 years warranty

ADVANTAGES OF USING THE HDPE MATERIALS

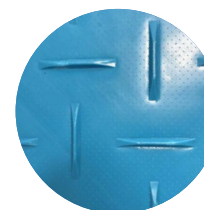

WILL NOT WARP, ROT, CRACK, OR DELAMINATE

SUSTAINABLE TO TEMPERATURE EXTREMES

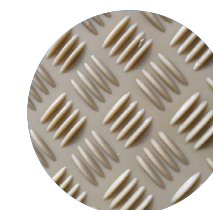

EASY TO MAINTAIN AND CLEAN

ANTI SLIP PATTERNS



**FLOATING BEACH
WHEELCHAIR**

**ENJOY THE WATER
WITH FAMILY & FRIENDS!**

WaterWheels® is perfect for all wheelchair users and those with special needs. WaterWheels® is designed to give users the Ideal Outdoor Experience. With the floatable armrests and tires, WaterWheels® easily transports you from the beach to the water! Enjoy the ocean or pool while relaxing in your WaterWheels®



“It is simply the **HIGHEST QUALITY** floating beach chair for the most affordable price”



**ENJOY THE COMFORT
OF WATERWHEELS®**

WaterWheels® is designed with our customers in mind. The wheelchair provides users with long lasting comfort so they can relax, recline and enjoy the outdoors!

The disabled community can now enjoy the beach, ocean, lake, waterpark & poolside with the reliability & comfort of Waterwheels®


**COMFORTABLY MOVE
FROM PLACE TO PLACE**

WaterWheels® is a three-wheeled buggy that is designed such that the user remains in a reclined position in an ergonomic chair.

The Waterwheels® seat has 3 positions, one to transition the user to the chair and two to recline the chair. These are adjusted by pulling a chain on the back for use and floating.

**CONVENIENTLY STORE
& TRANSPORT YOUR
WATERWHEELS®**

WaterWheels® is composed of 6 different parts: the frame, 2 armrests and 3 big wheels, and is easily assembled and disassembled in a matter of minutes without any tools! The wheelchair folds to allow you to conveniently transport in any vehicle or store until your next use!

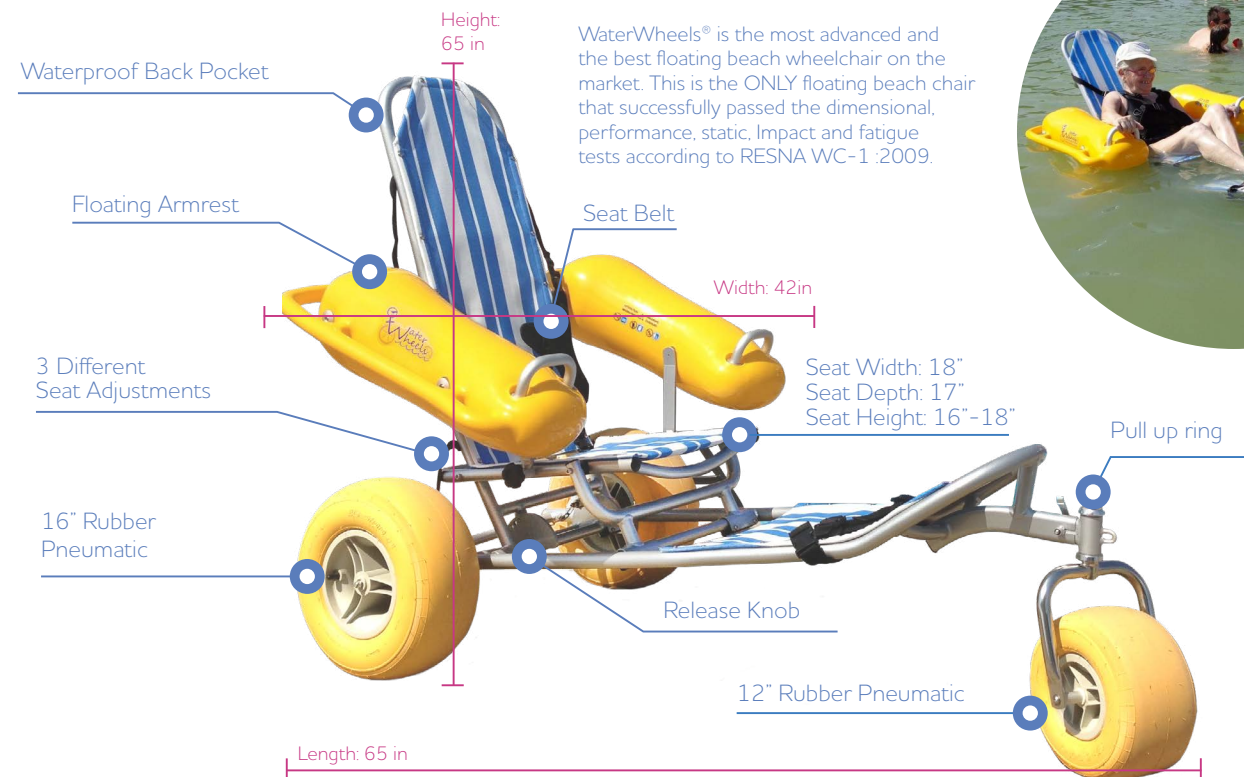



INTRODUCING TERRAWHEELS®!

TerraWheels® is an all-terrain wheelchair designed to provide easier access to all ground surfaces. It safely provides wheelchair users with transportation across areas where a conventional wheelchair becomes unmanageable. TerraWheels® is the ultimate solution for wheelchair users to access beaches, pools, parks, water parks, forest trails, grass, turf, gravel and snow-covered terrains.

It is simply the most **VERSATILE & STURDIEST** all-terrain wheelchair for all experiences at the most affordable price!



ENJOY THE OUTDOORS WITH FAMILY & FRIENDS!

TerraWheels® is designed to maximize your Outdoor Experience. TerraWheels® gives everyone the opportunity to enjoy all outdoor activities to their full ability! AccessRec, LLC created TerraWheels® with the goal to provide the most versatile options for wheelchair users to experience the outdoors, beyond the beach!

DURABILITY & COMFORT OF TERRAWHEELS®

TerraWheels® frames are manufactured of aluminum and stainless steel, while our wheels are made of rubber. TerraWheels® features two rear swivel wheels which allow for easier mobility on any surface. TerraWheels® comes with brakes so that users are safe and secure while stationary. To maximize comfort for users, our product offers three options for reclining, a wide eating space and a footrest.

It is simply the most versatile & sturdiest all-terrain wheelchair for all experiences at the most affordable price!

EASY TRANSPORTATION AND STORAGE

TerraWheels® can fold to easily transport and store in small spaces. It is easy to assemble & disassemble without any tools.



BENEFITS OF TERRAWHEELS®

- Rear wheel brake system
- Rubber wheels (easy to repair as opposed to grey PVC wheels)
- Aesthetically pleasing (colorful fabric and armrest) and wide back pocket
- Accommodates weight up to 300lbs.
- Back seat reclines & folds
- Comfortable frame with widest seating capacity
- Easy to push and maneuver through challenging terrain and spaces.



FITS THROUGH ALL STANDARD DOOR OPENINGS

Product Ref.: TUJ-4
Weight capacity: 300lbs



WETMAT® I: OUTDOOR LEISURE MATS

WetMat®I is a general purpose, slip-resistant mat that provides safety and enhanced comfort to all users. As an economical solution to versatile areas that are prone to water exposure, WetMat®I is effective where users are either barefoot or wearing shoes. WetMat's slip-resistant material makes it the ideal addition to increase safety around playgrounds, boardwalks & walkways, small craft boat launches, etc. Its lightweight material makes it ideal for easy installation and cleaning. WetMat®I can also be used to provide walkways in outdoor terrains that may experience moisture. As a general-purpose matting solution, WetMat®I can be applied to dirt, snow, mulch, concrete and wooden boardwalk as well as turf to add safety in outdoor spaces.



WETMAT® II: BAREFOOT AND AQUATIC RECREATION MATS

The ultimate sports and leisure matting for use in wet areas where barefoot traffic is extensive. Made from strong, non-porous PVC with channeled underbars, WetMat®II will automatically self-drain even the largest amounts of water. It is therefore perfect to dissipate a splash while installed around showers, swimming pools, saunas, hot tub and other wet areas.



WETMAT® III: HEAVY DUTY STABILIZATION MATTING

WetMat®III is a rugged version of WETMAT®I is a durable heavy-duty matting solution that increases safety and productivity once installed. This slip-resistant matting solution improves work environments in wide ranging recreational, commercial and industrial applications. This mat is intended to increase surface stabilization on any type of terrain, from pedestrian to medium weight vehicles. WetMat®III is ideal for boat launches, boat ramps and any other areas where ground stabilization & safety is needed.



wetmat® SPECIFICATIONS

Product	Material	Color	Dimensions		Thickness (inches)	Roll Weight (Lbs)
			Width (ft)	Length (ft)		
WetMat I®	Non Porous PVC	Brown Beige Black Blue	3	33	3/8	93
			4	33		124
WetMat II®			3	33	3/8	106
			4	33		141
WetMat III®			5	33	5/8	152
			6	33		203

BENEFITS

- Certified slip resistant
- UV resistant
- Excellent drainage
- Excellent hygiene
- Easy to cut on site
- Quick to install
- Countours to uneven surfaces

ACCESSORIES

CONNECTOR CLIPS
dual purpose, for joining sections of matting together side to side or end to end. Supplied in packs of 10.

CONNECTOR CLIP
side to end, for joining sections of matting together side to end. Supplied in packs of 10.

U-PINS
6.7" long x 2.75" wide steel staples used to anchor WetMat® into soft terrain.



GRASS MOBILITY / ACCESSIBILITY MATS


GRASSMAT® is a heavy-duty rollout matting system used to protect, reinforce and stabilize grassed areas and soft ground such as sand, soil, snow, woodchip, mulch, etc. Installed directly onto existing surfaces, GRASSMAT® is a cost-effective solution for a fast and efficient reinforcement and protection of field events, parking lots, pedestrian & wheelchair paths, emergency vehicles access routes and even light aircraft taxiways, etc. Its applications are endless. GRASSMAT® provides safety over any terrain prone to becoming muddy due to continuous vehicular or pedestrian traffic. Its unique oscillated mesh structure improves slip resistance and traction by up to 97% compared to standard straight oriented meshes. It also allows grass to grow through the mesh holes making it practically invisible after only one week. GRASSMAT® is the best solution to keeping grass healthy while providing a safer pathway to pedestrians, vehicles, wheelchair users and others that need an assisted access route.

GrassMat® is supplied in rolls of 3.28' or 6.56' wide by 32.8' or 65.6' long, in thickness of 0.55".

GRASSMAT® is manufactured from recycled and UV stabilized HDPE and is fully recyclable. (content minimum 20% recycled polymer).



GRASSMAT® is manufactured from recycled and UV stabilized HDPE and is fully recyclable. (content minimum 20% recycled polymer).

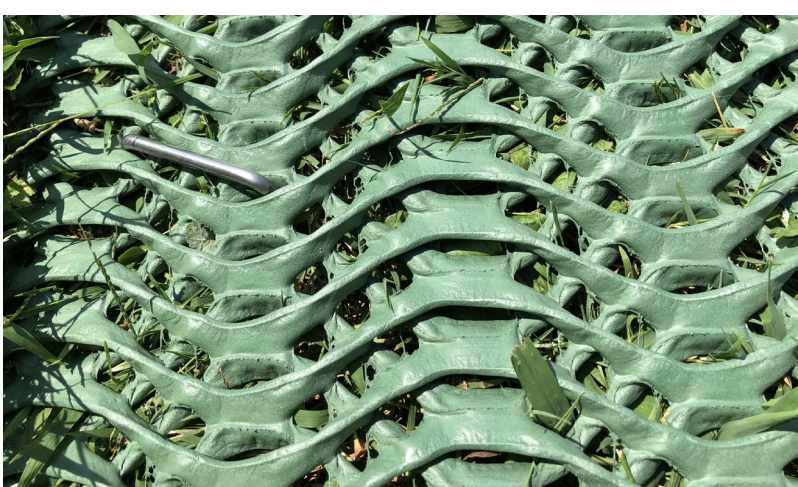

A COST-EFFECTIVE SOLUTION FOR:



- Pedestrian & Wheelchair paths – (ADA/ABA compliant routes)
- Temporary accessible routes to polling places
- Temporary sidewalks during construction
- Grass car parking areas
- Temporary & permanent paths to outdoor venues
- Front lawn pathway & parking
- Light aircraft taxiways
- Equestrian surfaces
- Caravan park access and caravan bays

IS GRASSMAT® RIGHT FOR YOU?

- Temporary or permanent matting applications
- Fast and cost-effective installation with no soil removal necessary
- Slip-resistant pathway
- Aesthetic matting solution as grass grows through mesh
- A High level of reinforcement and protection to high traffic areas (up to 8 tons per axle (imposed load))

ALSO AVAILABLE

with GrassMat® are anchoring devices such as steel U-pins (supplied by qty of 50 units by 6.7" long x 2.75 wide) and plastic spikes (supplied by Qty 50 units by 8" long). Two straps are supplied per roll for storage and transport.

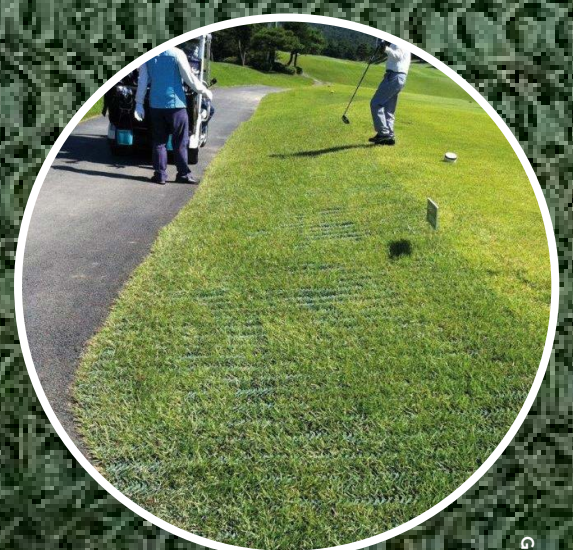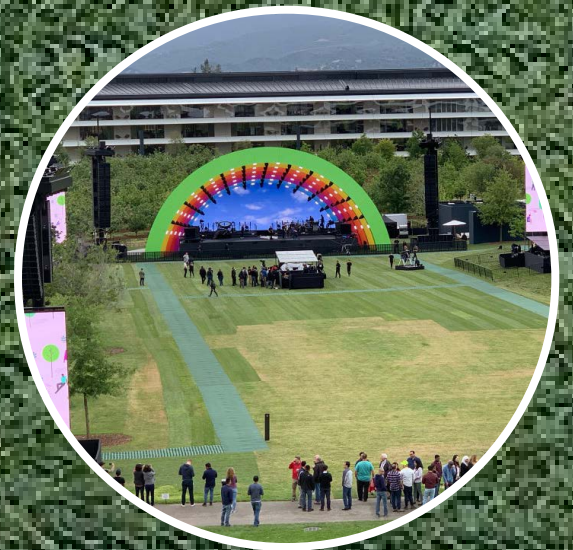



ALSO OFFERS



PVC CHAIRS

Our four chairs are made of durable PVC construction and non-corrosive wheels.



MR. BOARDWALK®

A roll out wooden walkway system made of Trex® or Teak Ipe. Offered in 3' to 6' wide walkway.



HIPPOCAMPE®

A high-end quality aluminum and stainless steel beach and All-Terrain chair.



MUSTMOVE®

MustMove®BAM is a 9.5' wide rubber coated Trackway & Boat Ramp Roll Out Mobility Matting System reinforced with composite bars and protected with anti-sliding coated surface.

OUTDOOR WHEELCHAIRS

Product	Item #	Description	Weight Cap (lbs/sqft)
WaterWheels®	BW-150	Floating beach & Pool Chair Aluminum & Stainless Steel	300
Hippocampe®	HIPPO	All Terrain WheelChair Aluminum & Stainless Steel	250
PVC Beach Chair®	PVCBW-4	PVC Beach Wheelchair 4 Big PVC rubber/wheels "Wheeleez"	250
	PVCBW-2	PVC Beach Wheelchair Swivel Rear PVC wheels/tires "Wheeleez"	250
	PVCYEL-4	PVC Beach Wheelchair 4 big yellow rubber wheels/tires "Sunny"	250
	PVCYEL-2	PVC Beach Wheelchair Swivel rear rubber wheels/tires "Sunny"	250
TerraWheels®	TW-4	All Terrain Aluminum & Stainless Steel Wheelchair Swivel rear rubber wheels/tires "Sunny"	300

SAND FENCE

Product	Item #	Weight (lbs/sqft)	Dimensions Width (ft) Length (ft)	Weight (Lbs)
Sand Fence®	SF50-3S	HDPE Knitted Mesh	Sand	75
	SF50-3G			
	SF100-3S		Sand	150
	SF100-3G			

accessrec®
ADA/ABA COMPLIANT BEACH ACCESS SURFACES

Product	Item #	Material	Color	Weight (lbs/sqft)	Dimensions		Roll Weight (Lbs)	
					Width (ft)	Length (ft)		
ACCESSDECK	AD-4x6	HDPE Panel	Blue/Tan	2.88	4	6	69	
ACCESSDECK® USA	ADUSA-4x6	HDPE Panel	Lt. Blue/Tan	2.63	4	6	63	
AccessMat® KIT	AM3-25	100% Recycled NON WOVEN Polyester Fabric/Roll	Blue or Brown	0.42	3	25	32	
	AM3-33					33	42	
	AM3-50					50	63	
	AM3-100					100	126	
	AM3-ANG AM3-SQ					CUST.		—
	AM3-CUST					CUST.		—
	AM5-25					5	25	57
	AM5-33						33	75
	AM5-50						50	114
	AM5-100						100	228
	AM5-ANG AM5-SQ			CUST.			—	
	AM5-CUST			CUST.			—	
	AM6-25			6	25		68	
	AM6-33				33		90	
	AM6-50				50		137	
	AM6-100				100		273	
	AM6-ANG AM6-SQ				CUST.		—	
	AM6-CUST				CUST.		—	
	AM10-25				10	25	113	
	AM10-33					33	149	
AM10-50	50	225						
AM10-ANG AM10-SQ	CUST.		—					
AM10-CUST	CUST.		—					
ACCESSCOM™ KIT	AC3	Magic Fabric	Custom Logo & Text		3	2.25		
	AC5				5	2.25		
	AC6				6	2.25		
	AC10				10	2.25		
DURADECK 2®	DD2	HDPE Panel	Tan / White	2.68	4	8	86	
GRASSMAT®	GM3.3-33	Oscillated HDPE	Green	0.41	3.3	33	45	
	GM3.3-66					66	89	
	GM6.6-33					33	89	
	GM6.6-66					66	179	
Mr. BOARDWALK®	MBT-3	Trex	Gray	4.58	CUST.	3	—	
	MBT-4					4		
	MBT-5					5		
	MBT-6					6		
	MBTI-3	Teak IPE	Brown	3.6	3			
	MBTI-4				4			
	MBTI-5				5			
	MBTI-6				6			
MOSTMOVE® PATH	0ENGDIERSF	Rubber Coated Fabric	Tan	0.45	4.9	33	73	
MOSTMOVE® BAM	MMOSACNRR19001	Rubber Coated Fabric	Tan	0.45	9.5	32.8	143	
WETMAT® Grade I	WMI3-33	PVC	Beige, Blue, Brown	0.94	3	33	93	
	WMI4-33					4	124	
WETMAT® Grade II	WMI3-33					3	33	106
	WMI4-33						4	141
WETMAT® Grade III	WMI3-33	3	33	152				
	WMI4-33		4	203				

accessrec
GLOBAL



OUR HISTORY

58 YEARS OF EXPERIENCE

AccessRec LLC is an American family owned business founded by Sebastien Ragon, his wife, Kristen and John Rafanello in Clifton, NJ. The development of AccessRec LLC was truly inspired by both Sebastien and Kristen's passion for leisure and recreational activities, as a holistic approach for healthy living. Together, they formed AccessRec LLC, with the mission of providing safe, effective access to recreational opportunities for individuals of all abilities. From ground accessibility matting systems to wheelchairs, AccessRec LLC offers a wide range of products to improve safe inclusion to recreation.

Let us assist you in making your areas more accessible for ALL by joining ACCESSREC LLC community!



ABOUT THE OWNER

SEBASTIEN RAGON

Sebastien has over a decade of experience in the water-based access industry. His expertise includes negotiating and collaborating with city officials, park managers, other government and non-profit organizations, as well as individuals, in the acquisition process to close deals ranging from \$1,000 to \$3.5 million dollars. His strong ethical approach of confronting any challenge continues to make him a great partner with distributors, agents, contractors and governmental clients. He prides himself on innovative thinking which has resulted in improving and creating new products nationally, as well as internationally. Sebastien has participated in several hearings with the U.S. Access Board and the American Shore & Beach Preservation Association to discuss and establish ADA beach access routes. His expertise, experience and sensitivity were invaluable in assessing the need for ADA guidelines which mandates access to beaches for all. Sebastien has also participated in numerous conferences, trade shows and trainings such as the ADA Symposium, National Recreation & Parks Association (NRPA), American Shore & Beach Preservation Association (ASBPA), to stay in the forefront of the Accessibility and Recreation Industries. Sebastien is always ready to roll up his sleeves to help clients with installations or to demonstrate the superior quality of AccessRec products. He values the feedback of clients first hand by being available in the field to assess immediate and future needs. Although, Sebastien began his work improving access for ALL in 2004, his personal experience of rehabilitating from a stroke in 2013, further sealed both his and Kristen's commitment to therapeutic recreation and availability. Sebastien proudly attributes his recovery to his characteristic perseverance and hard work, and undeniably, Kristen's dedication and support. This successful teamwork is reflected in their work ethic, creating the foundation of AccessRec LLC.

NEW JERSEY WIRE CLOTH COMPANY INC.

JOHN RAFANELLO

John has an extensive experience in the polyester matting Industry. John took over the family business, NJWC, originally established in 1959. John and Seb have been partnering to manufacture AccessMat®, the world's best ADA compliant beach access mats! John's customer service is unmatched and his final product is always backed with satisfaction guaranteed.



ACCESSREC, LLC - US HEADQUARTER

55 Park Slope | Clifton, New Jersey 07011 USA

Office: +1 973-955-0514 - Fax: +1 201-624-7007

Email: sales@AccessRec.com - **Web:** www.AccessRec.com



FIND US ON FACEBOOK!

www.facebook.com/AccessRecLLC



Advantage!
www.gsaadvantage.gov

GSA Contract # 47QSWA20D005C